


Front panel:

The **screws must be loosened** at the bottom of the front plate - then the whole inox front plate can be removed **downwards**. At the top, the plate is clamped between two plates, so tap it down slightly.

Image: view between Plexiglas (red mark). **Loosen the nuts**, the thread holds on the front plate.

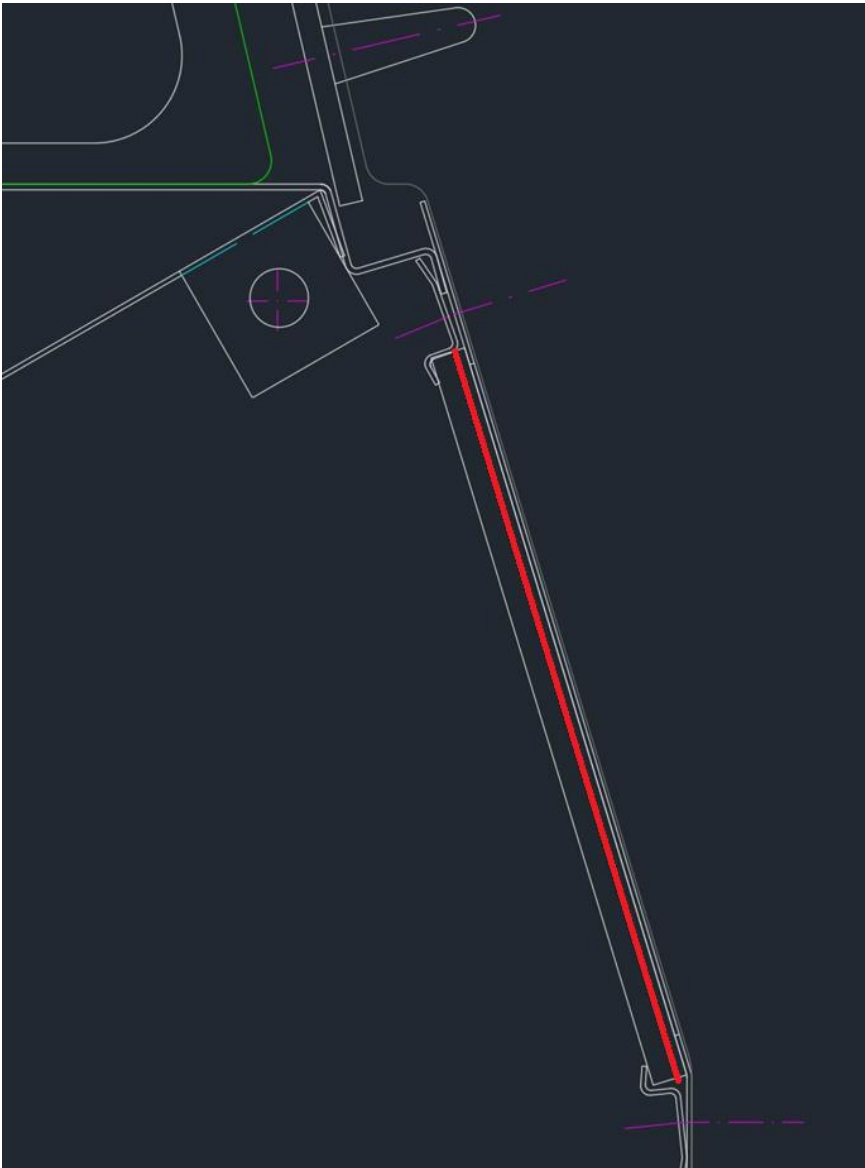

Shelf:

Here, the exchange is easy.

Image: view behind Plexiglas (red mark). **It can be pushed up after opening the door** - replace it with another one and put it back.

